


# Guide to Measuring Power Cords & Cord Sets


Interpower® measures its **cord sets** from the face of the connector to the face of the plug, not including the pins. Interpower uses this method for all cord sets.

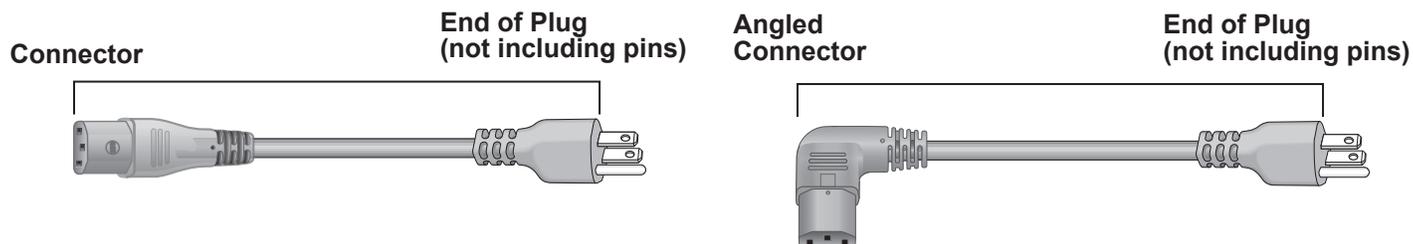

When using a hooded male plug, the measurement will be from the edge of the hood.



Interpower measures its **power cords** from the face of the connector or plug, not including pins, to the end of the cable. Interpower uses this method for all power cords.

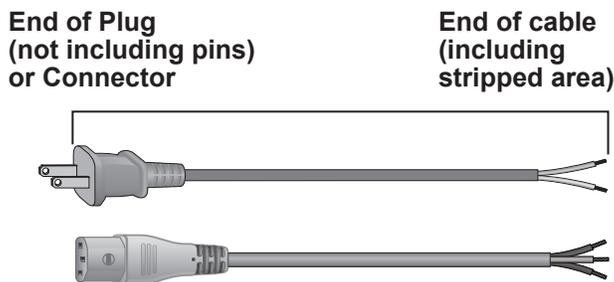

## Interpower Standard Tolerances

Length	Standard Tolerance
0-2.99 ft. (0 - 913 mm)	+/- 1 in. (25mm)
3-5.99 ft. (914 - 1827mm)	+/- 2 in. (51mm)
6-11.99 ft. (1828 - 3656 mm)	+/- 3 in. (76mm)
12-19.99 ft. (3657 - 6095 mm)	+/- 4 in. (102mm)
20-49.9 ft. (6096-15210 mm)	+/- 6 in (152mm)
50+ (15240+ mm)	+/- 12 in (305mm)



U.S.A.  
P.O. Box 115, Oskaloosa, IA 52577  
**United States/Canada, Puerto Rico, Virgin Islands**  
Toll-Free Phone: (800) 662-2290 • Toll-Free Fax: (800) 645-5360  
**International**  
Phone: (641) 673-5000 • Fax: (641) 673-5100  
E-mail: sales@interpower.com

**UK**  
10 Kelvin Drive • Knowlhill, Milton Keynes  
Buckinghamshire MK5 8NH  
**UK, Ireland, Germany, Switzerland, Austria**  
Freephone: 00800 5566 5566 • Freefax: 00800 5655 5655  
**International**  
Phone: +44 (0)1908 295300 • Fax: +44 (0)1908 295301  
E-mail: uk@interpower.com